


## Removing and installing glove box

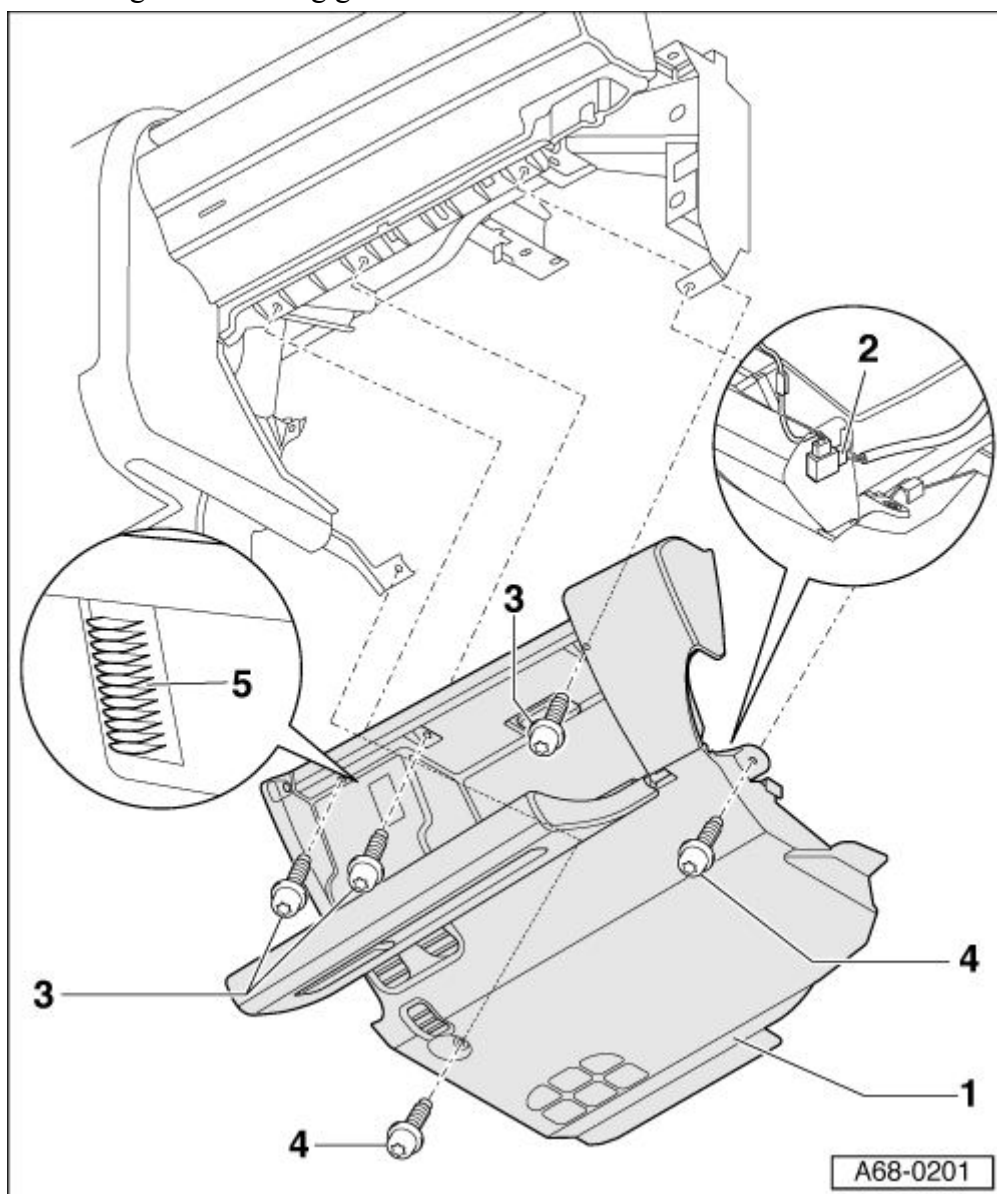

1 - Glove box

t Removing

q Remove trim for A-pillar (bottom) → [Chapter](#).

– Open glove box lid.

– Unclip coin holder -5- from below.

– Remove bolts -3- (3x).

– Remove bolts -4- (2x).

– Unplug connector -2-.

– Unplug connector to key-operated switch for front passenger's airbag → [Fig.](#)

– Remove switch for deactivation of front passenger's airbag → [Chapter](#).

2 - Connector

3 - Bolts (3x)

q Tightening torque: 4 Nm

4 - Bolts (2x)

q Tightening torque: 4 Nm

5 - Coin holder

Unplugging connector for key-operated switch for front passenger's airbag

- Press release mechanism -3- and pull connector -2- out of switch -1-.

