

Removing outer dash panel vent

- Remove driver's storage compartment → [Chapter](#) or glove box → [Chapter](#).

- Press out outer dash panel vent -1- from rear.

